




**28011-56**

# INSTRUCTIONS

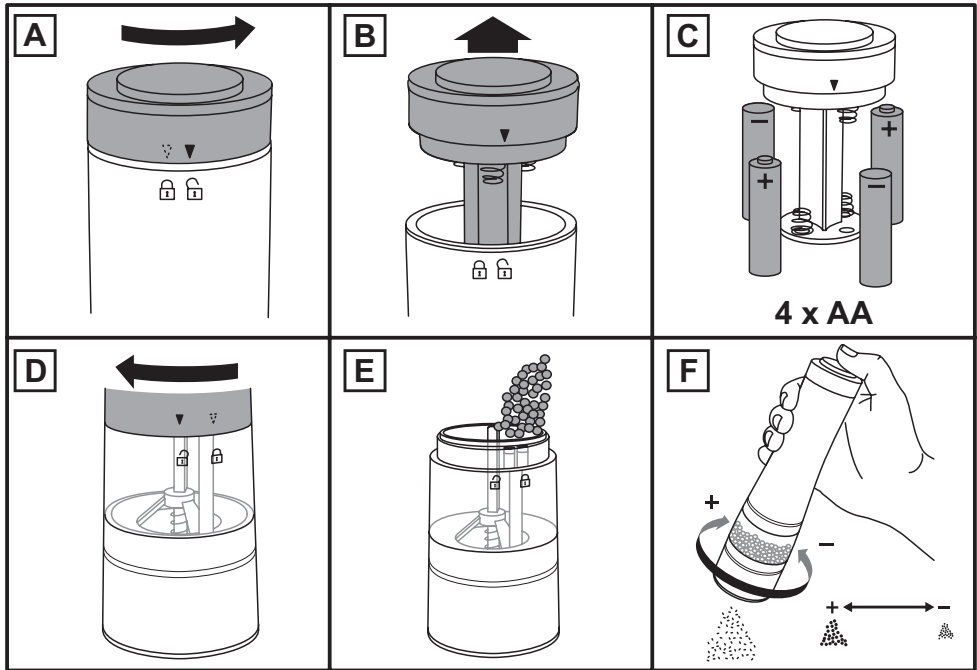

## IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

Children shall not play with the appliance.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short circuited.

- Move ▼ from to .
  - Remove the battery holder.
  - Fit 4 x AA batteries. Replace the battery holder. Move ▼ from to .
  - Move ▼ from to .
  - Remove the holder. Fill with salt or peppercorns. Replace the holder. Move ▼ from to .
  - Twist the bottom to adjust the grind: - fine + coarse. Press the button to grind, release to stop.
- After use, place the grinders onto the bases provided.

## RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.